

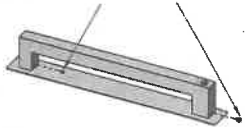


# Back to Back Handle with Cylinder


1. Remove the 2 screws from the inside handle.

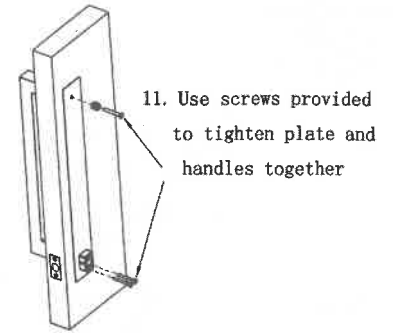

7. Install 2 location pins

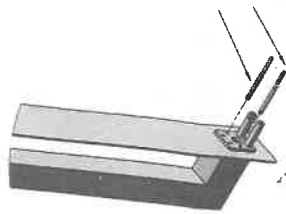

11. Use screws provided to tighten plate and handles together

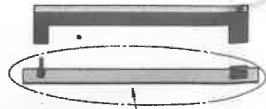


2. Remove handle from the plate


8. Put spindle into the hole of the outside handle, then turn the spindle until it cannot be turned, then turn back the spindle 90 degrees




12. Install inside handle by turning the spindle casing till it cannot be turned. Then turn back 90 degrees

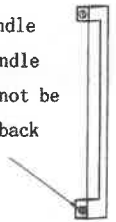


3. Dismantle bolt and nut from plate

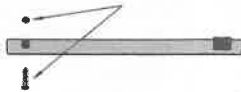


9. Insert outside handle by placing the spindle in the centre of the latch

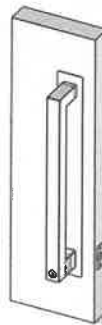


13. Before installing inside handle make sure that the spindle is protruding 1-1.5cm away from the door, align the spindle casing with the spindle then install inside handle

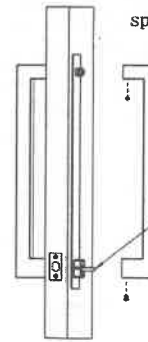


4. Install latch into door edge noting direction of latch

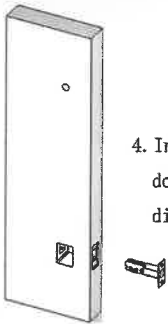


5. Install outside handle by removing two screws as shown in diagram

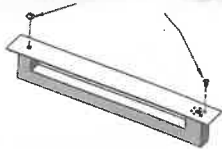

6. Install screw post and locating pin board

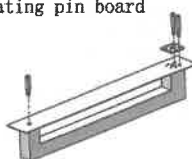

10. Install inside plate by aligning it with the spindle from the outside handle

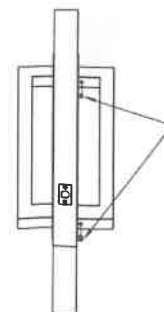

14. Install 2 screws